



AUX Cable Wiring Diagram

Connects Cube RS-232 serial port to PC/Terminal for bootloading and Terminal Menu access

