


## BOARD & CABLE INTERCONNECT Using the Multi-Rx Board (instead of the RXAMP board)

The "Internal Cable Set" connects signals from SDR Cube pc boards to the internal Softrock "RF front end".

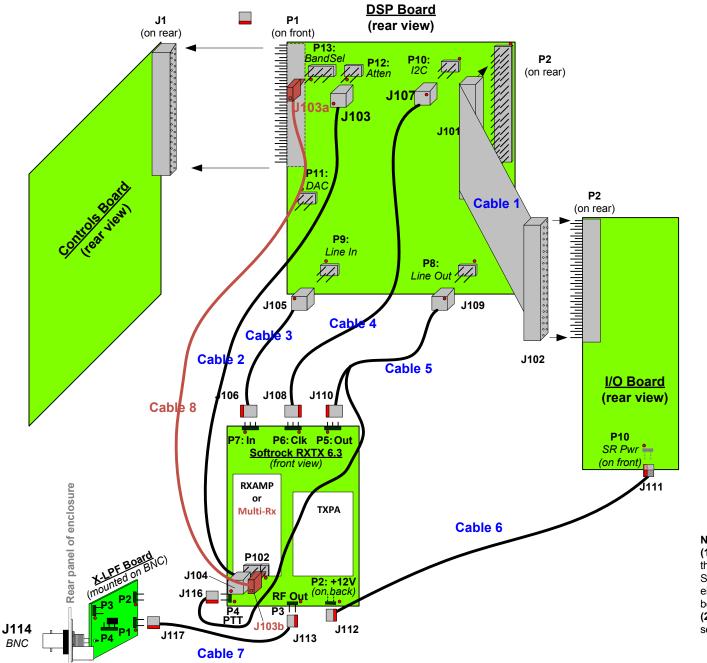

## **External Cable Set** Connects signals from SDR Cube pc boards to a DB-15 connector on the rear of the enclosure to allow the Cube to control external Softrocks. J103 J107 J105 J109 Cable 8 J115 (DB15-socket) (Mounted on rear panel of enclosure) "External Softrock" P117 (DB15-pin) With plastic shell. Provided for mating external electronics.

## NOTES:

- (1) The External Cable Set is actually intended for use <u>internal</u> to the SDR Cube enclosure to connect the signals to the "External Softrock" connector on the rear panel of the enclosure. One would either use the <u>Internal</u> cable set or the <u>External</u> cable set but not both at the same time.
- (2) Cable 1 is included in both the Internal and External cable sets.